

- > Port size: G1/8 & G1/4
- > Very compact unit
- Maximum remaining oil content and particle removal to 0,01µm





Technical features

Medium:

Compressed air only

Maximum inlet pressure:

10 bar (145 psi) Transparent bowl 17 bar (246 psi) Metal bowl

Filter element:

0,01 µm

Remaining oil content:

0,01 ppm at +21°C (+69°F)

Flow:

see below

Port sizes:

G1/8 or G1/4

Bowl:

31 ml **Drain:**

Manual or automatic

Ambient/Media temperature:

Transparent bowl

-34 ... +50°C (-29 ... +122°F)

Metal bowl

-34 ... +65°C (-29 ... +149°F)

Air supply must be dry enough to avoid ice formation at temperatures

below +2°C (+35°F)

Note:

Install an F07 filter with a 5 μm filter element upstream of the F39 filter for maximum service life.

Materials:

Body: Zinc alloy

Bowl: Plastic or Zinc alloy


Element: Synthetic fiber and

PE foam Seals: NBR

Technical data, Standardmodels

Symbol	Port size	Flow *1) (dm³/s)	Drain	Bowl	Weight (kg)	Model
\Diamond	G1/8	2,8	Manual	Plastic	0,13	F39-100-M0TG
•	G1/4	3	Manual	Plastic	0,13	F39-200-M0TG
-	G1/8	2,8	Automatic	Plastic	0,13	F39-100-A0TG
	G1/4	3	Automatic	Plastic	0,13	F39-200-A0TG

^{*1)} Max. flow at 6,3 bar

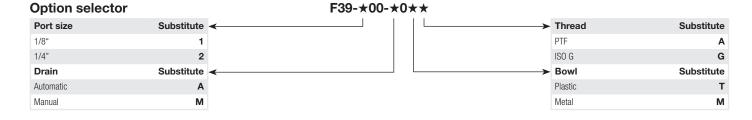

Typical performance characteristics

Inlet pressure (bar)	Flow *1) (dm³/s)
1	1,2
3	2,0
5	2,7
6,3	3,0
7	3,1
9	3,6

^{*1)} Maximum flow to maintain stated oil removal performance.





Dimensions in mm

 \bigcirc

Projection/First angle

Accessories



Service kit




Dimensions


Wall mounting bracket


Manual drain

1 5939-06

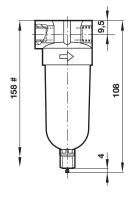


Automatic drain

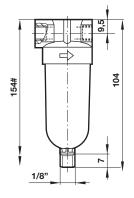



Wall mounting bracket

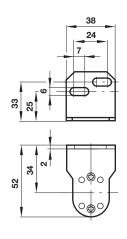

Use 1/8" (3 mm) screws to mount bracket to wall.

$\begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \begin{tabular}{ll} \begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \begin{tabular}{ll} \begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \# & \mbox{Minimum clearance required to remove bowl } \\ \hline \begin{tabular}{ll} \# & \mbox{Minimum clearance requ$

Warning

These products are intended for use in industrial compressed air systems only. Do not use these products where pressures and temperatures can exceed those listed under

»Technical features/data«.

Before using these products with fluids other than those specified, for non-industrial applications, life-support systems or other applications not within published specifications, consult IMI NORGREN.

Through misuse, age, or malfunction, components used in fluid power systems can fail in various modes.

The system designer is warned to consider the failure modes of all component parts used in fluid power systems and to provide adequate safeguards to prevent personal injury or damage to equipment in the event of such failure.

System designers must provide a warning to end users in the system instructional manual if protection against a failure mode cannot be adequately provided.

System designers and end users are cautioned to review specific warnings found in instruction sheets packed and shipped with these products.